

FITTING INSTRUCTION

Clamp mark in acc. with		Cables joining
ISO	PN	
1	L	Left directional lights
2	+	Rear fog lights
3	31	Ground
4	R	Right directional lights
5	58R	Right side parking lights
6	54	Stoplights
7	58L	Left side parking lights

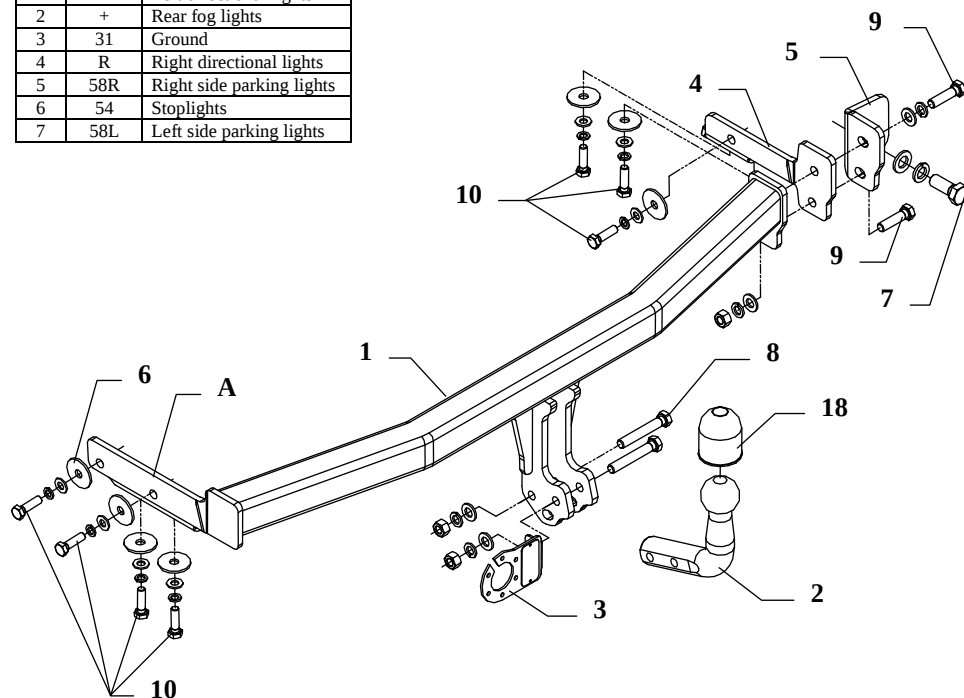


Fig. 1

This towbar is designed to assembly in following car:
NISSAN ALMERA, 3/5 door, (N16), produced since 03.2000 till 12.2006,
catalogue number **V49** and is prepared to tow trailers max total weight
1500 kg and max vertical load **75 kg**.

From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towbar depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towbar should be install in points described by a car producer.

The instruction of the assembly

1. Disassemble the bumper and the muffler.
2. To right chassis member slide bracket (pos. 4) and screw loosely with bolts M10x35mm (pos. 10) through original holes.
3. Put main part of the towbar (pos. 1) (part A in left chassis member) and screw loosely with bolts M10x35 and screw all together with mounted bracket (pos. 4) and angle element (pos. 5) with bolts M12x45mm (pos. 9) as shown in the fig. 1.
4. Angle element (pos. 5) screw with bolt M16x40mm – pos. 7 (instead of original tow handle).
5. Reassemble the muffler and the bumper (after cut out his fragment) see fig. 2
6. Fix tow-ball (pos. 2) and socket plate (pos. 3) using bolts M12x75mm (pos. 8) from accessories.
7. Tighten all bolts according to the torque shown in the table.

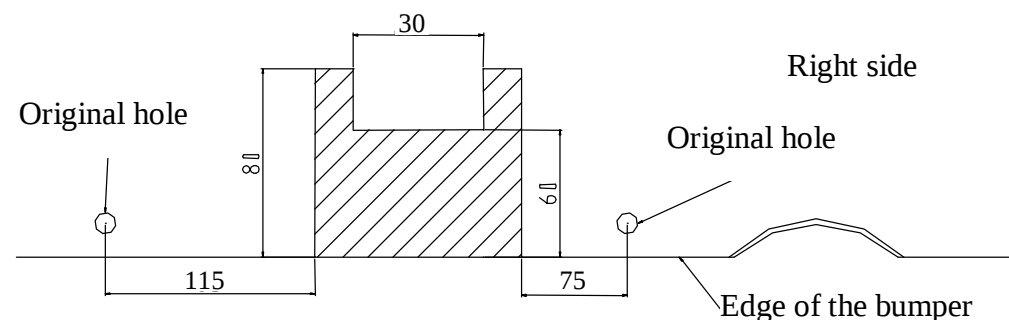


Fig.2

8. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station).
9. Complete the paint coating damaged during assembly.

Torque settings for nuts and bolts (8,8):	
M 8 - 25 Nm	M 10 - 55 Nm
M 12 - 85 Nm	M 14 - 135 Nm

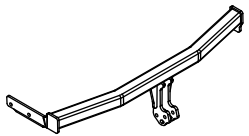


NOTE

After install the towbar you should get adequate note in registration book (at authorised service station).The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towbar must be always kept clear and conserve with a grease.

Towbar accessories:

Pos. 1	Name: Main bar Quantity: 1	Pos. 6	Name: Washer Quantity: 7 Dim.: $\varnothing 35 \times \varnothing 12 \times 3 \text{ mm}$	Pos. 12	Name: Plain washer Quantity: 1 Dim.: $\varnothing 17 \text{ mm}$
		Pos. 7	Name: Bolt 8,8 B Quantity: 1 Dim.: M16x40mm	Pos. 13	Name: Plain washer Quantity: 4 Dim.: $\varnothing 13 \text{ mm}$
Pos. 2	Name: Tow ball Quantity: 1	Pos. 8	Name: Bolt 8,8 B Quantity: 2 Dim.: M12x75mm	Pos. 14	Name: Plain washer Quantity: 7 Dim.: $\varnothing 10,5 \text{ mm}$
		Pos. 9	Name: Bolt 8,8 B Quantity: 2 Dim.: M12x45mm	Pos. 15	Name: Spring washer Quantity: 1 Dim.: $\varnothing 17 \text{ mm}$
Pos. 3	Name: Socket plate Quantity: 1	Pos. 10	Name: Bolt 8,8 B Quantity: 7 Dim.: M10x35mm	Pos. 16	Name: Spring washer Quantity: 4 Dim.: $\varnothing 12,2 \text{ mm}$
		Pos. 11	Name: Nut 8 B Quantity: 3 Dim.: M12	Pos. 17	Name: Spring washer Quantity: 7 Dim.: $\varnothing 10,2 \text{ mm}$
Pos. 4	Name: Right bracket cpl. Quantity: 1			Pos. 18	Name: Ball cover Quantity: 1
					
Pos. 5	Name: Right bracket Quantity: 1				
					



PPUH AUTO-HAK S.J.

Produkcja Zaczepów Kulowych
Henryk & Zbigniew Nejman
76-200 SŁUPSK ul. Słoneczna 16K
tel/fax (059) 8-414-414; 8-414-413
E-mail: office@autohak.com.pl
www.autohak.com.pl

Towing hitch (without electrical set)

Class: A50-X Cat. no. V49

Designed for:

Manufacturer: NISSAN

Model: ALMERA

Type: 3/5 door, N16

produced since 03.2000 till 12.2006

Technical data:

D-value: 8,0 kN

maximum trailer weight: 1500 kg

maximum vertical cup load: 75 kg

Approval number acc. to regulations EKG/ONZ 55.01: **E20-55R-01 1244**

Foreword

This towbar is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving, and values for the towing hitch cannot be exceeded.

D-value formula:

$$\frac{\text{Max trailer weight [kg]} \times \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]} + \text{Max vehicle weight [kg]}} \times \frac{9,81}{1000} = D \text{ [kN]}$$