



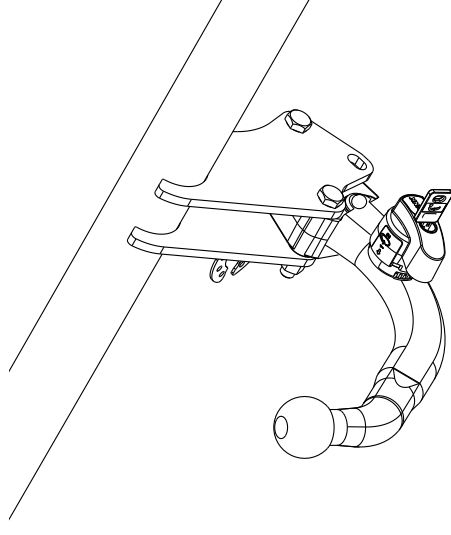
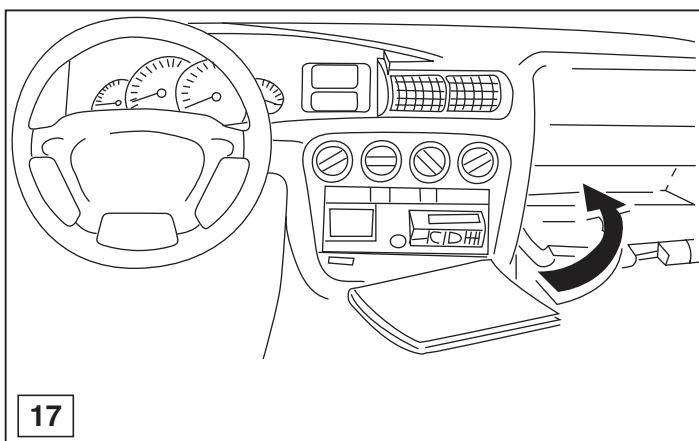
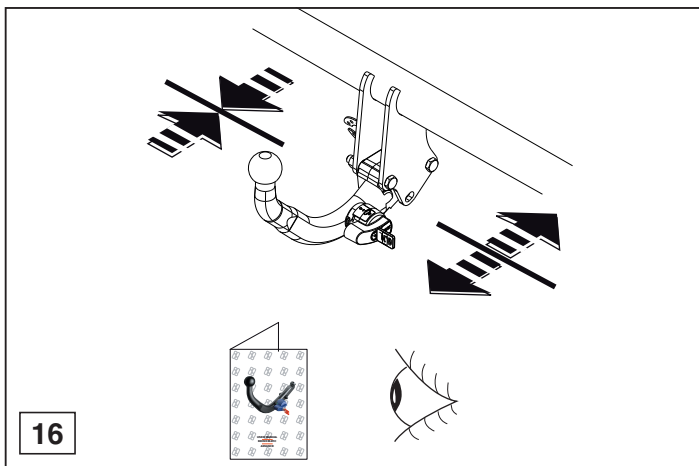


Fitting instructions
Make: Audi
A4 / A5; 2007->
A4 Avant; 2008->
A5 Sportback; 2009->
Type: 4926


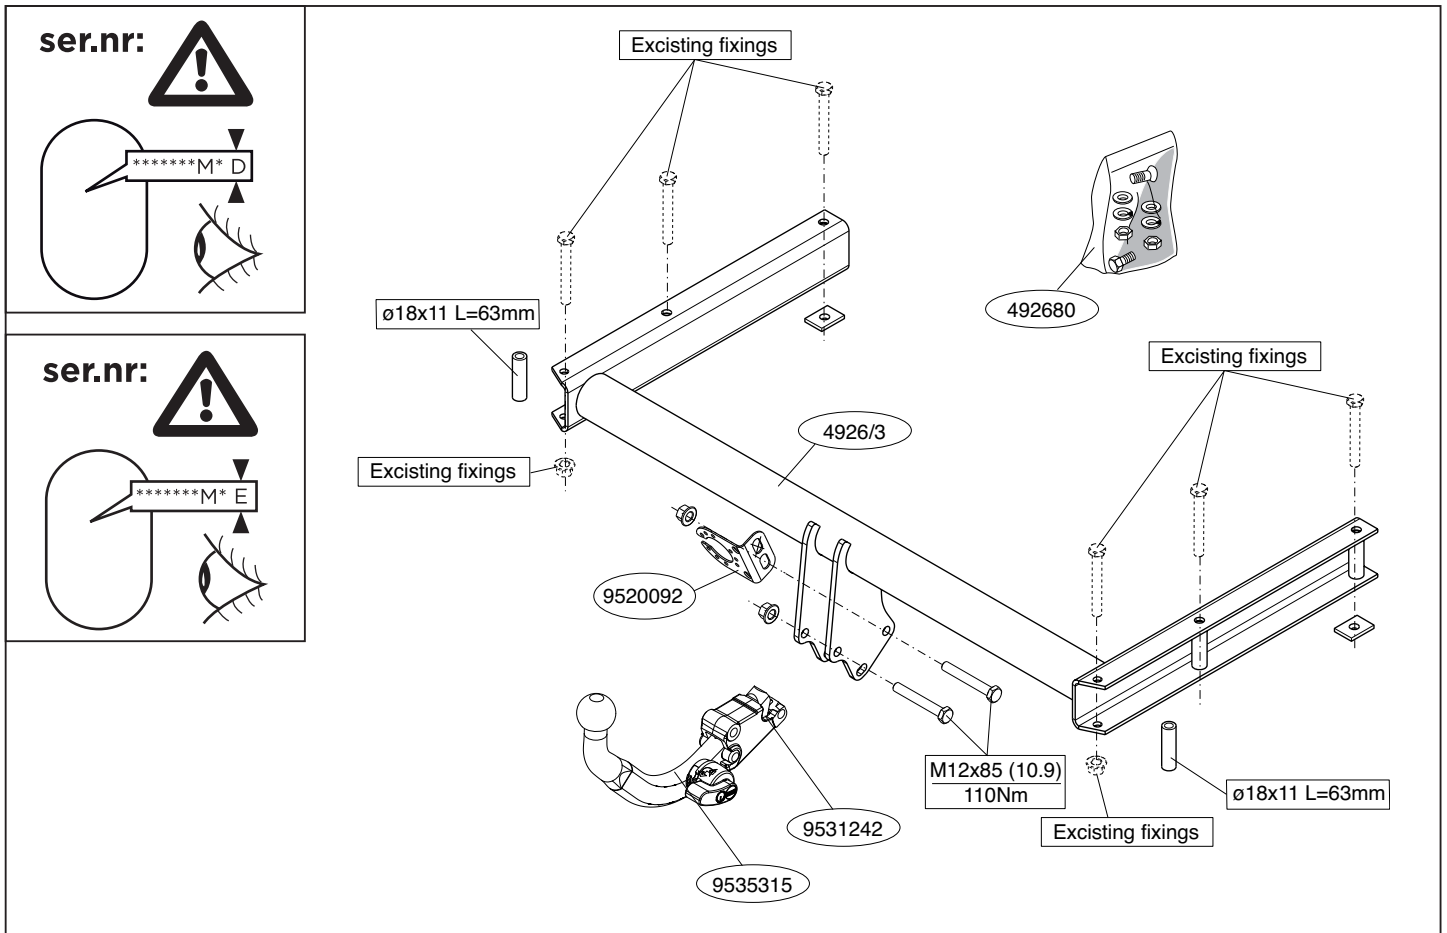


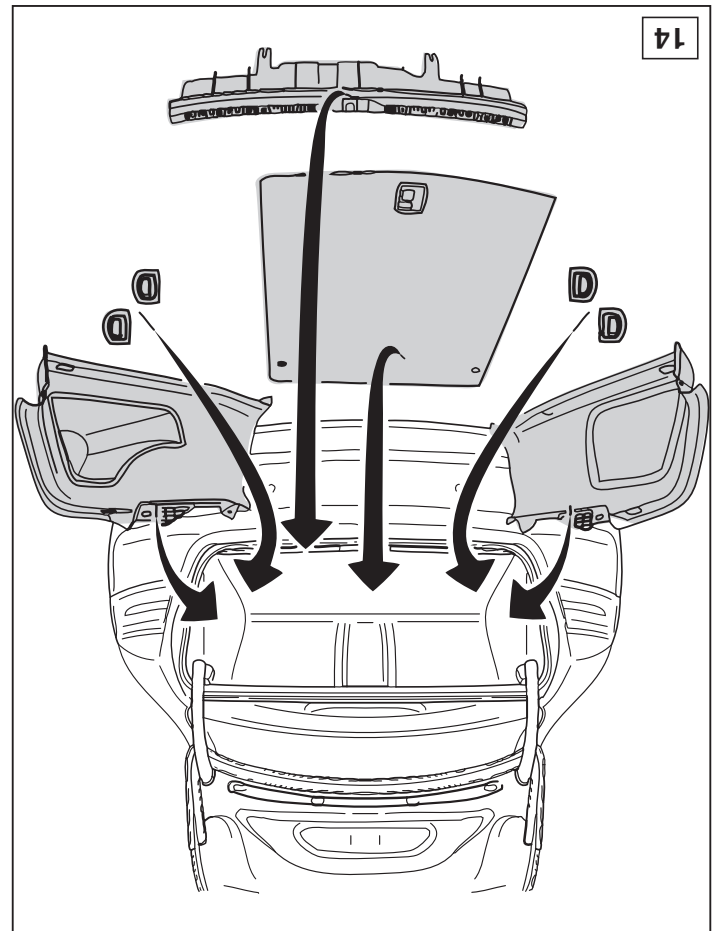







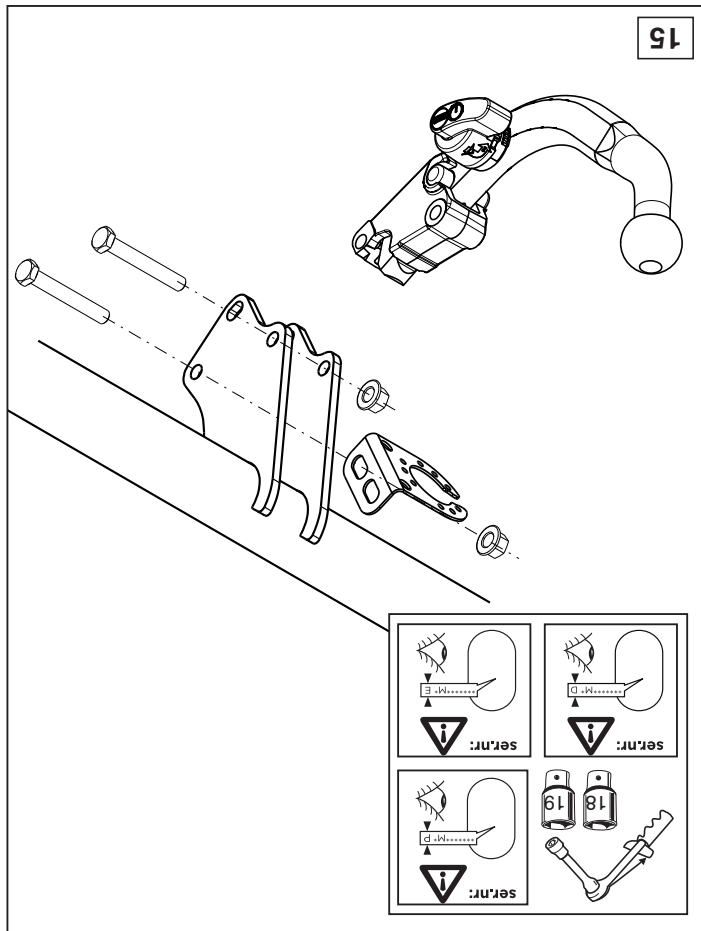


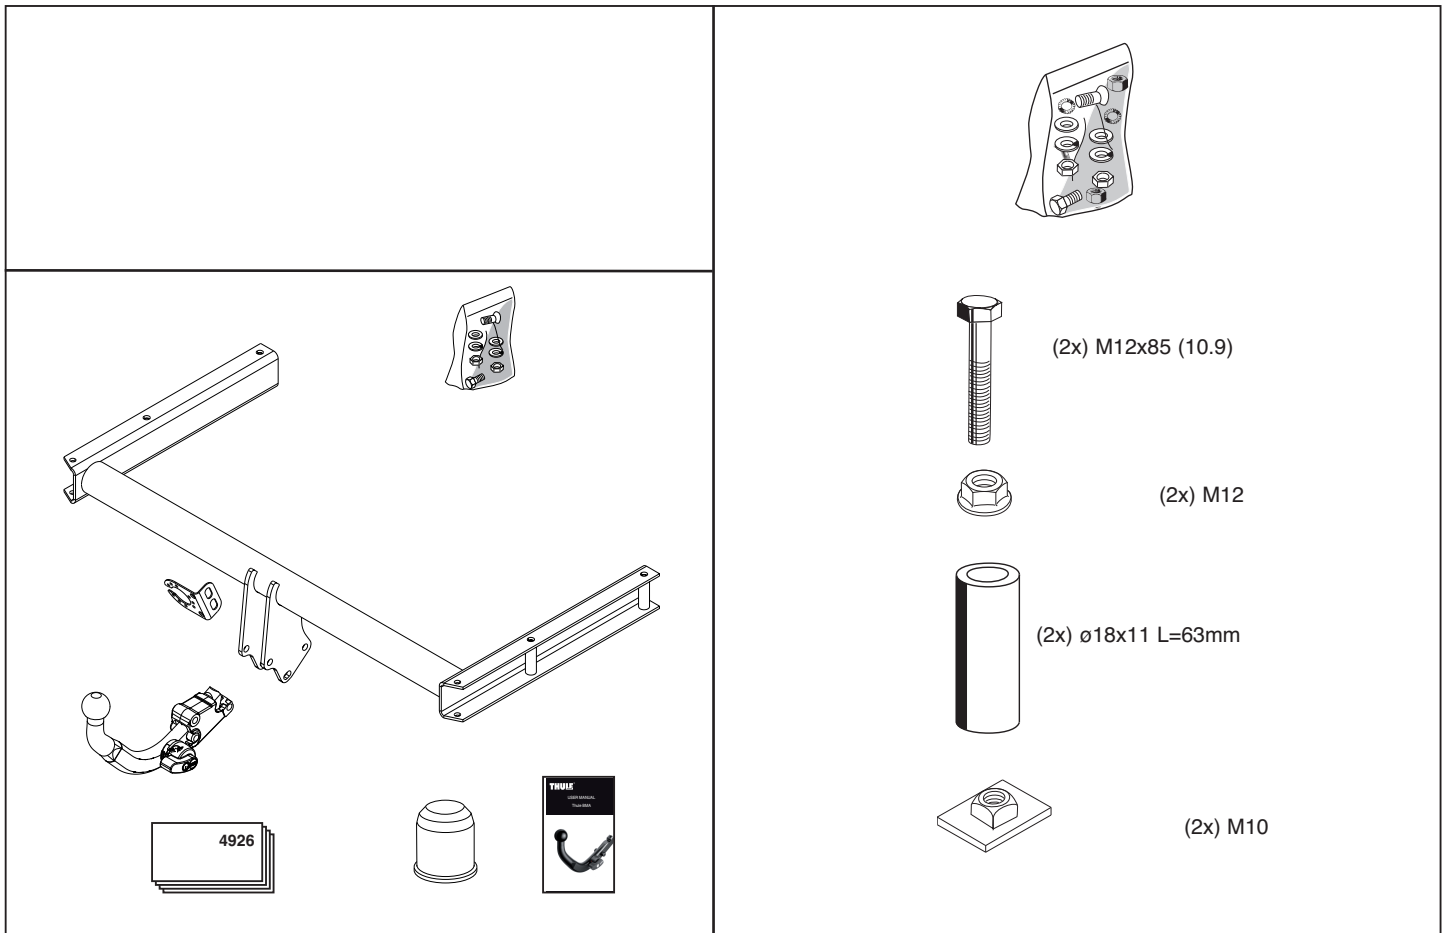


© 492670/09-06-2015/3

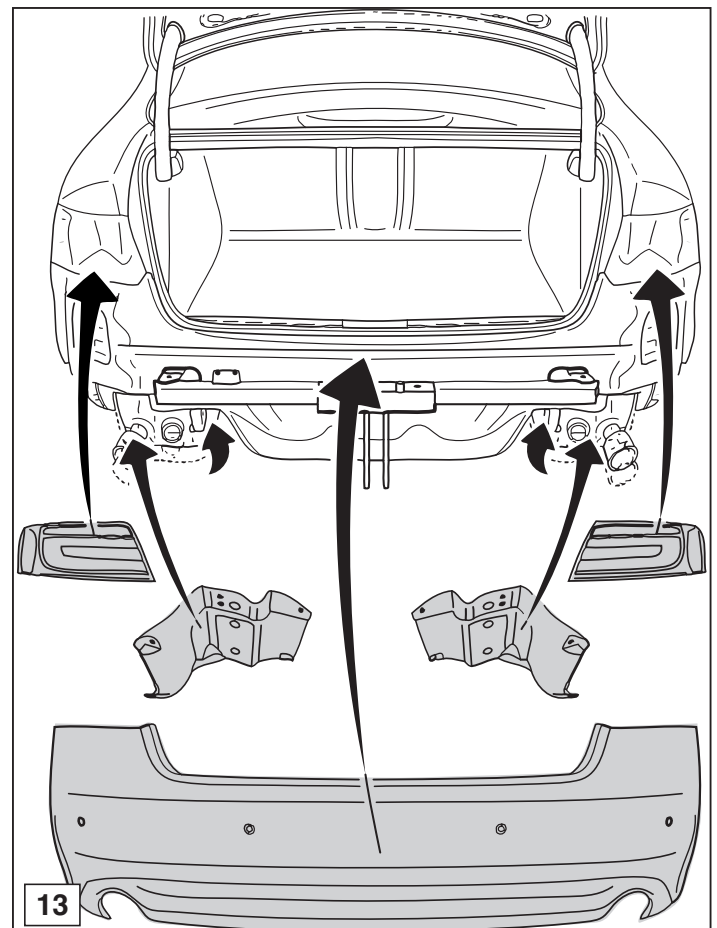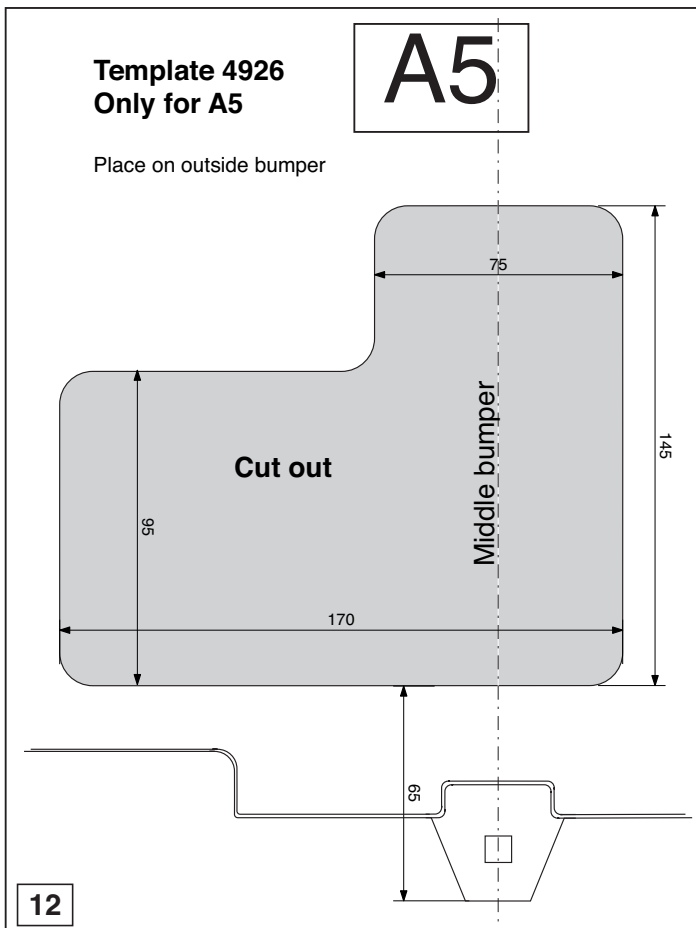

© 492670/09-06-2015/12

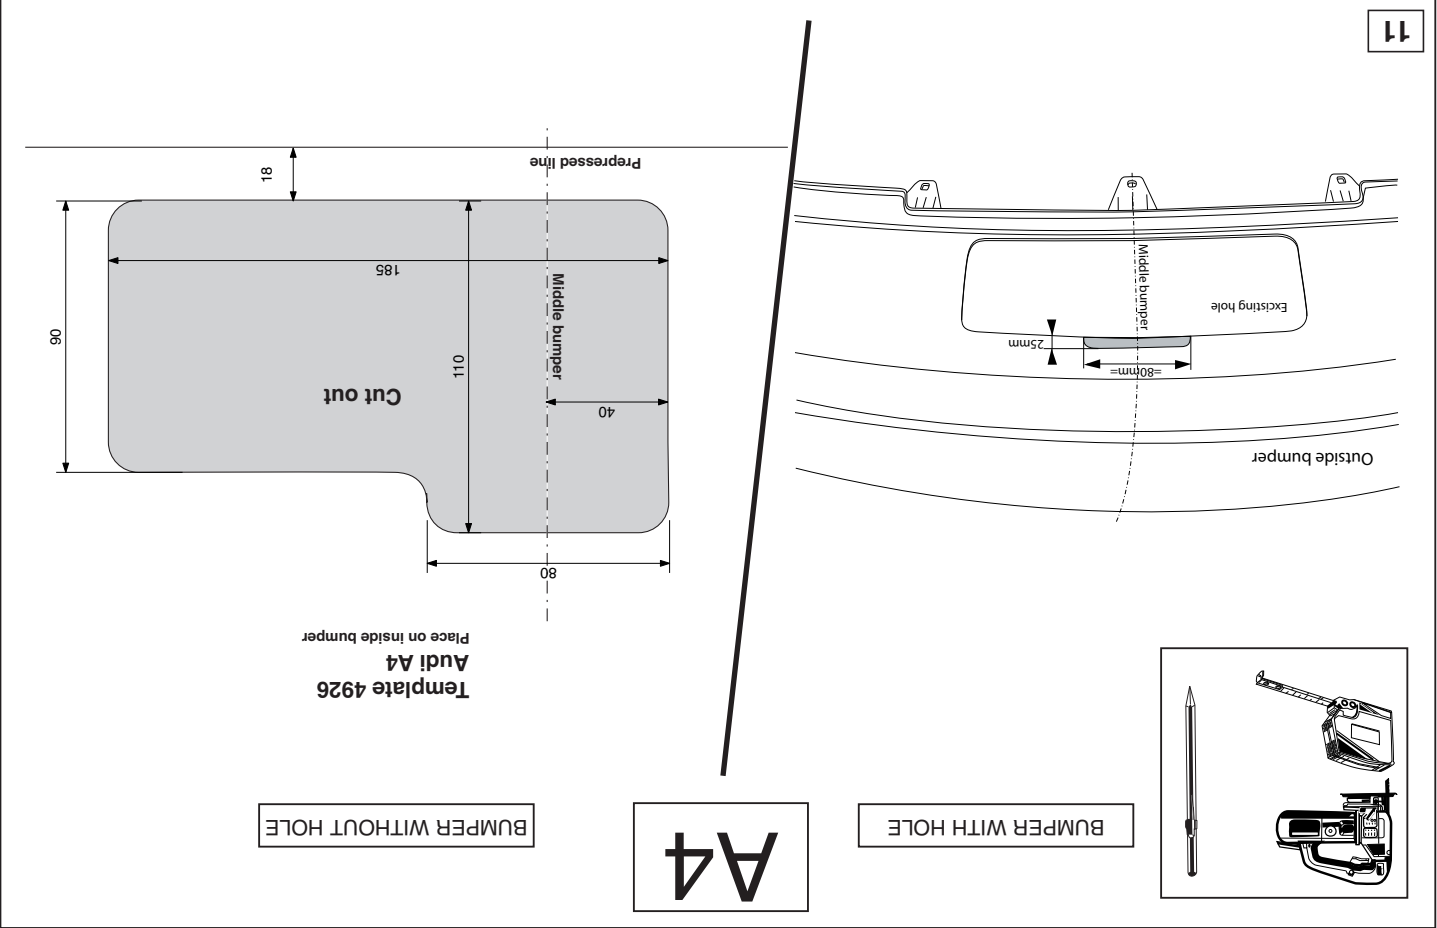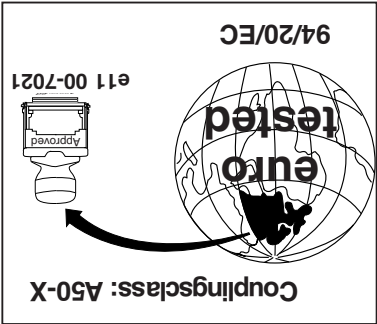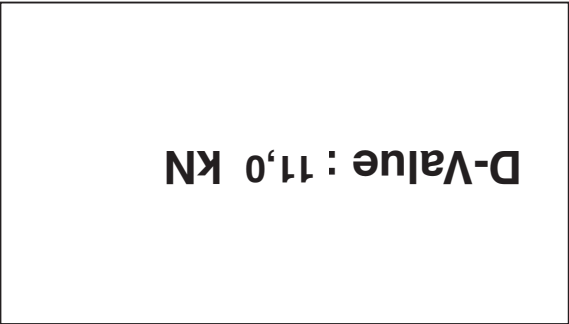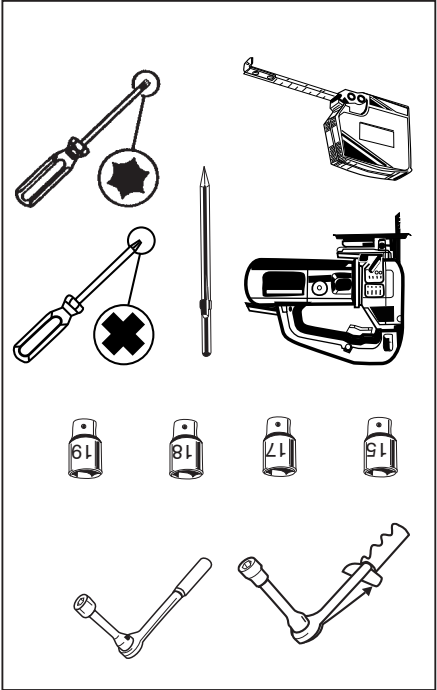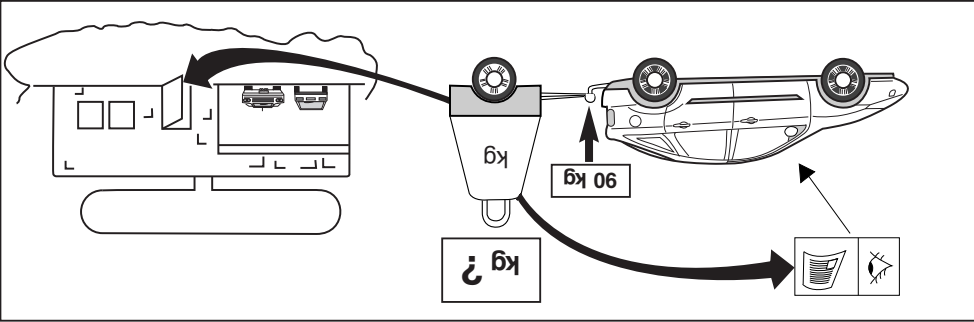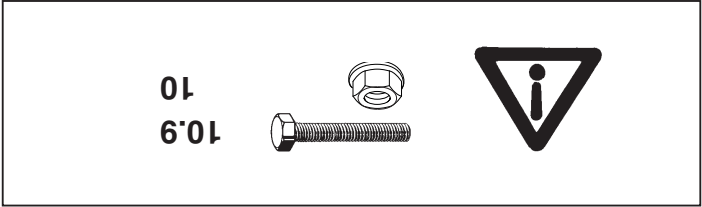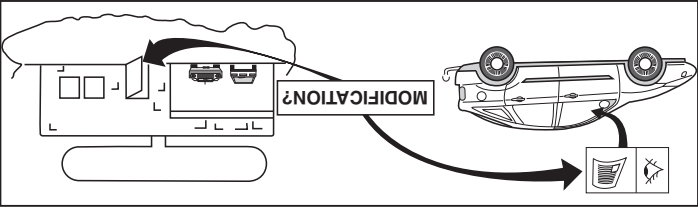

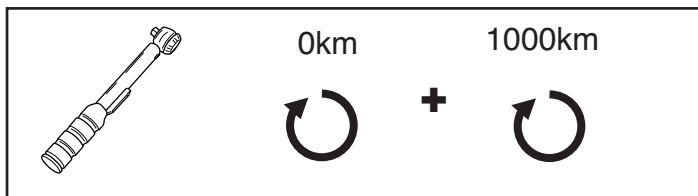

NOTE:

* Should this installation process entail the cutting of the bumper – confirmation **MUST** be obtained by the installation engineer of the customer's acceptance prior to completion. Thule Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.

All measurements are in mm!



HINWEISE:

* Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muß die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.






Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.



* Elektrische Anlage gemäß StVZO anbringen.

© 492670/09-06-2015/5

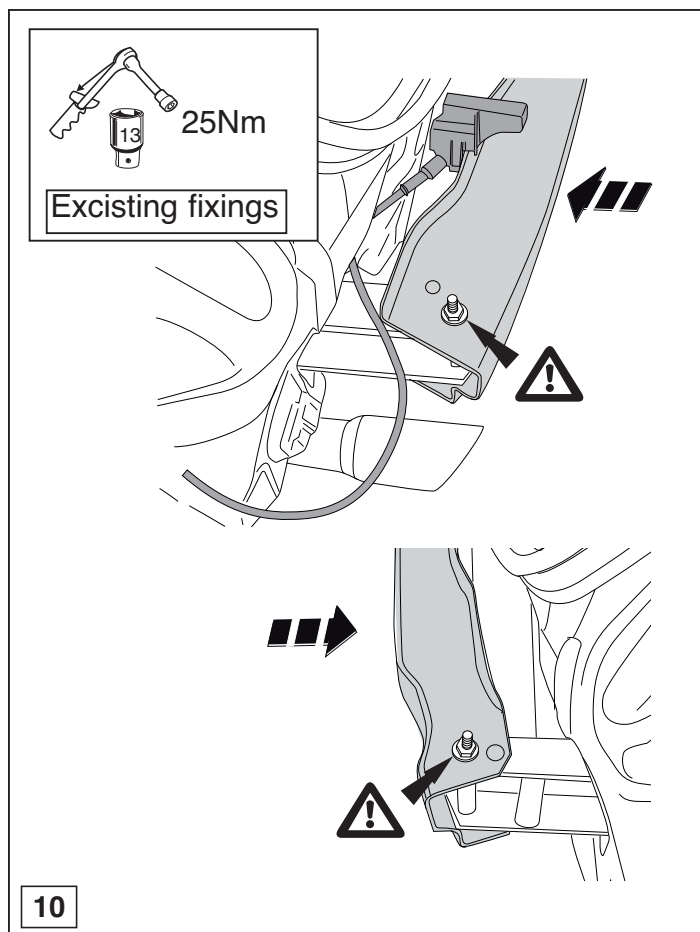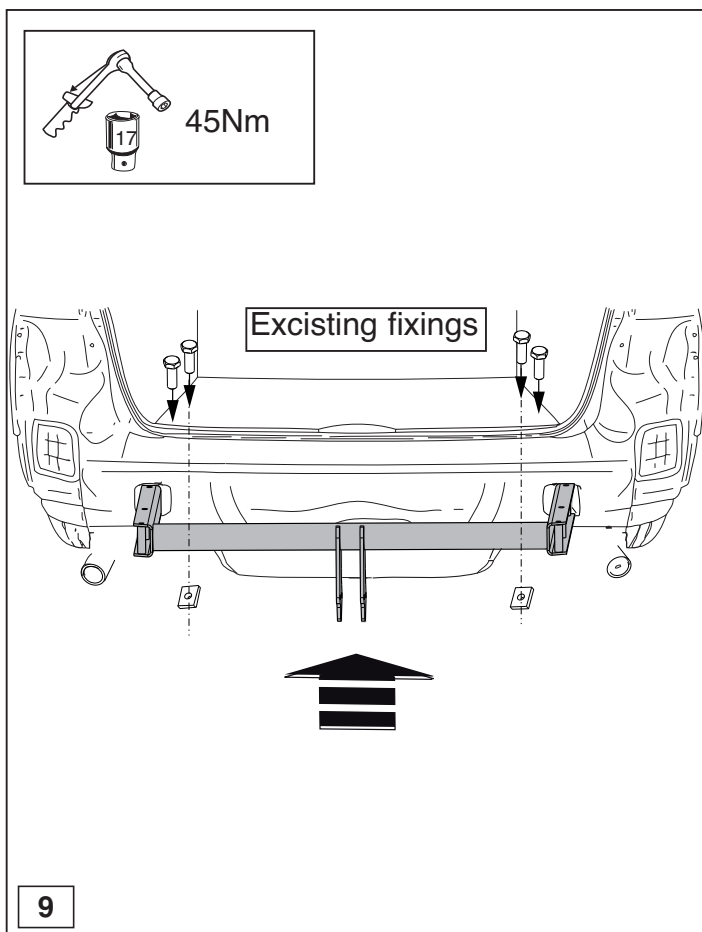


© 492670/09-06-2015/10

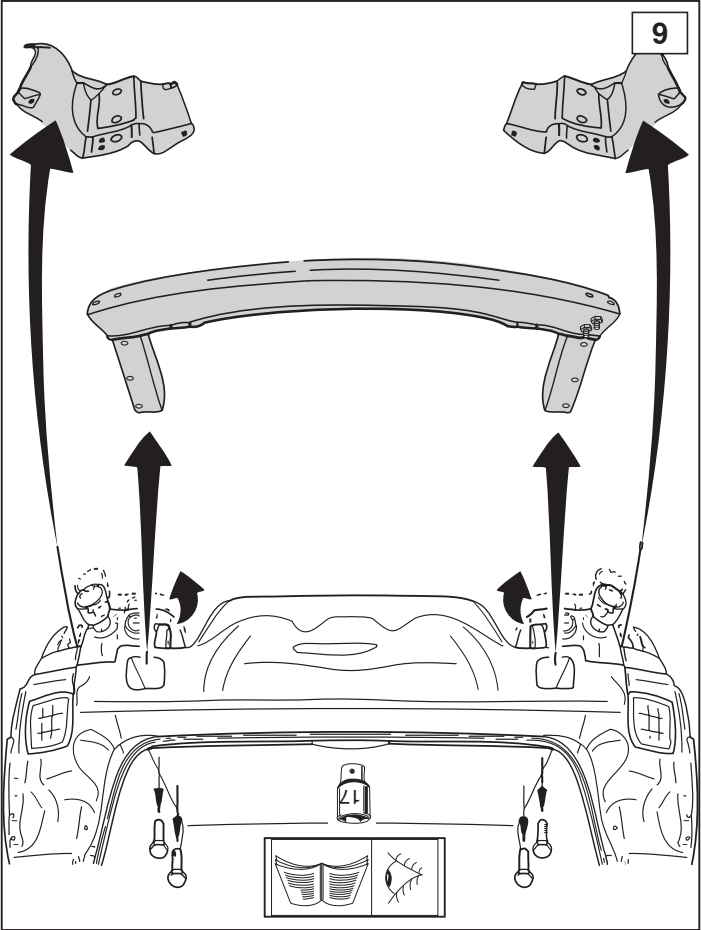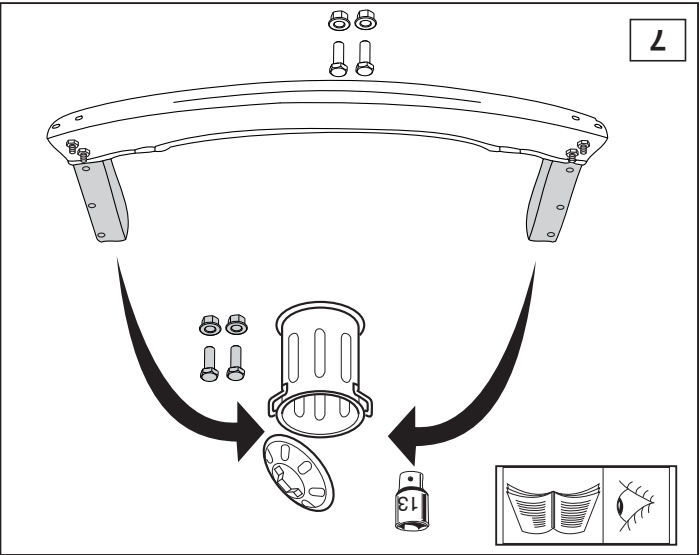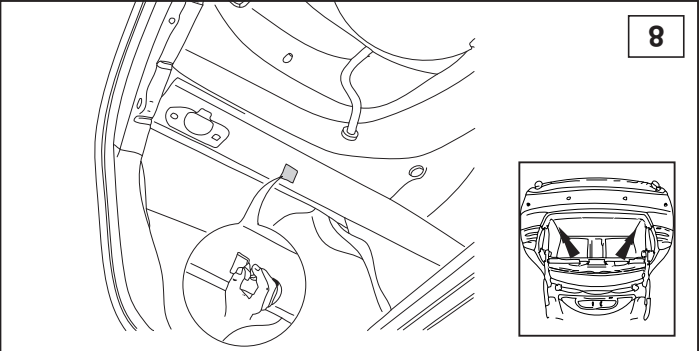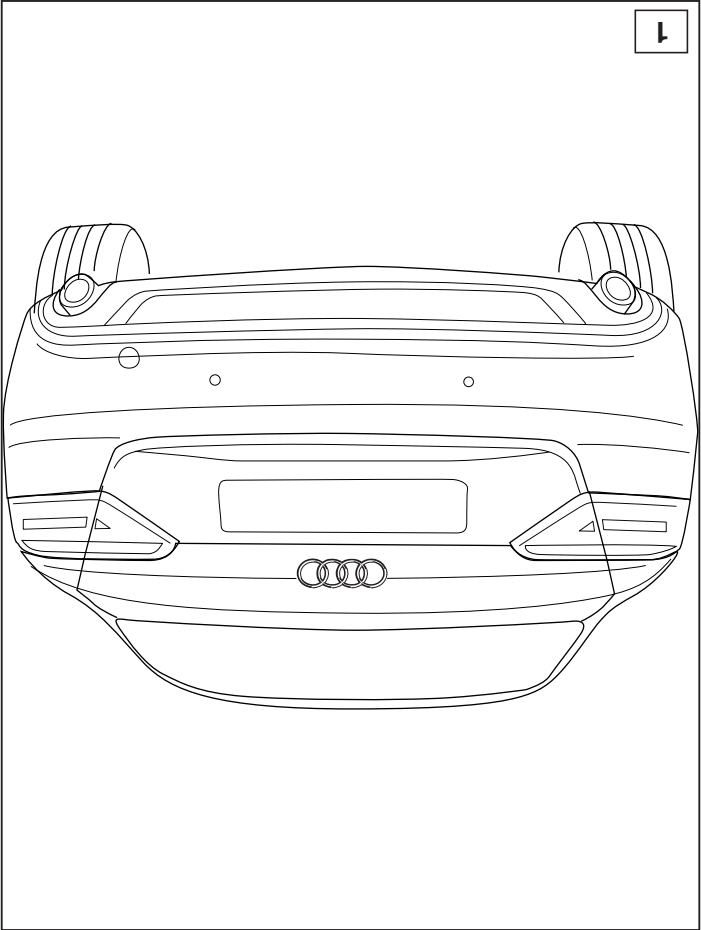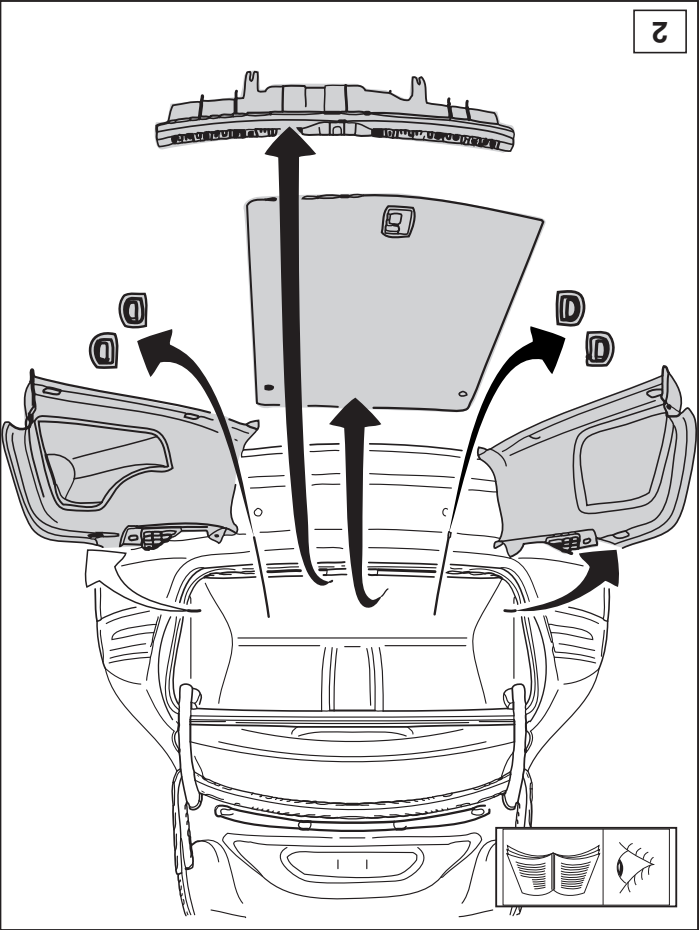

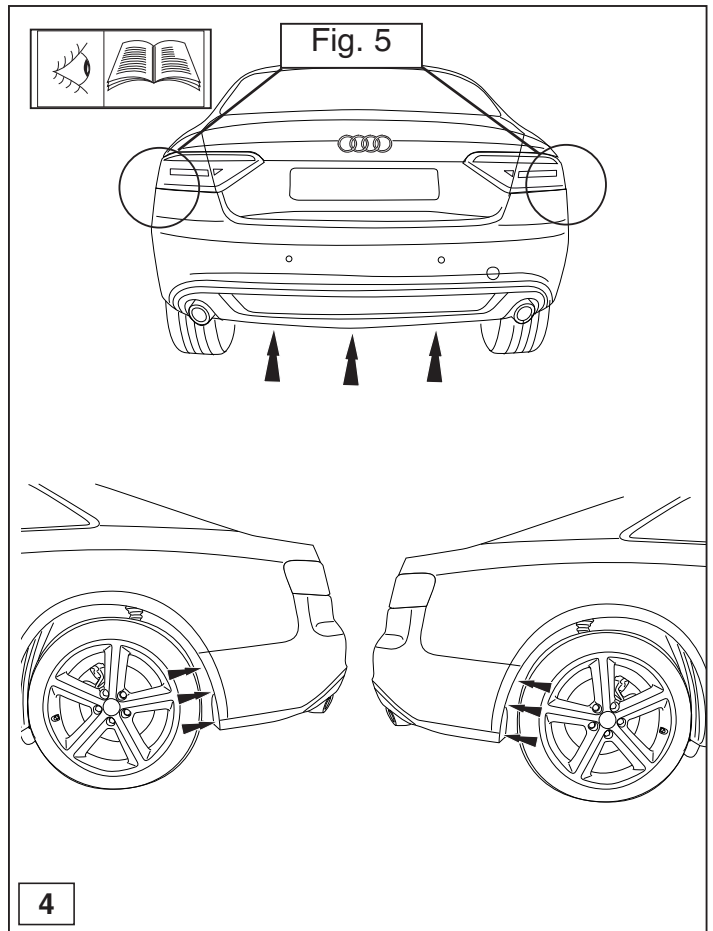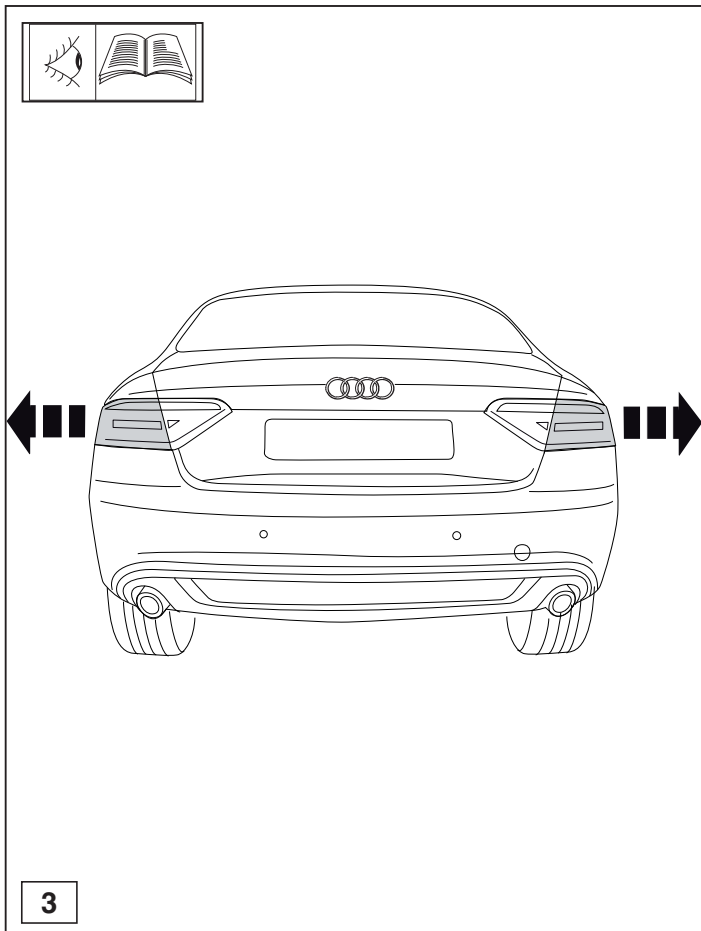

© 492670/09-06-2015/7

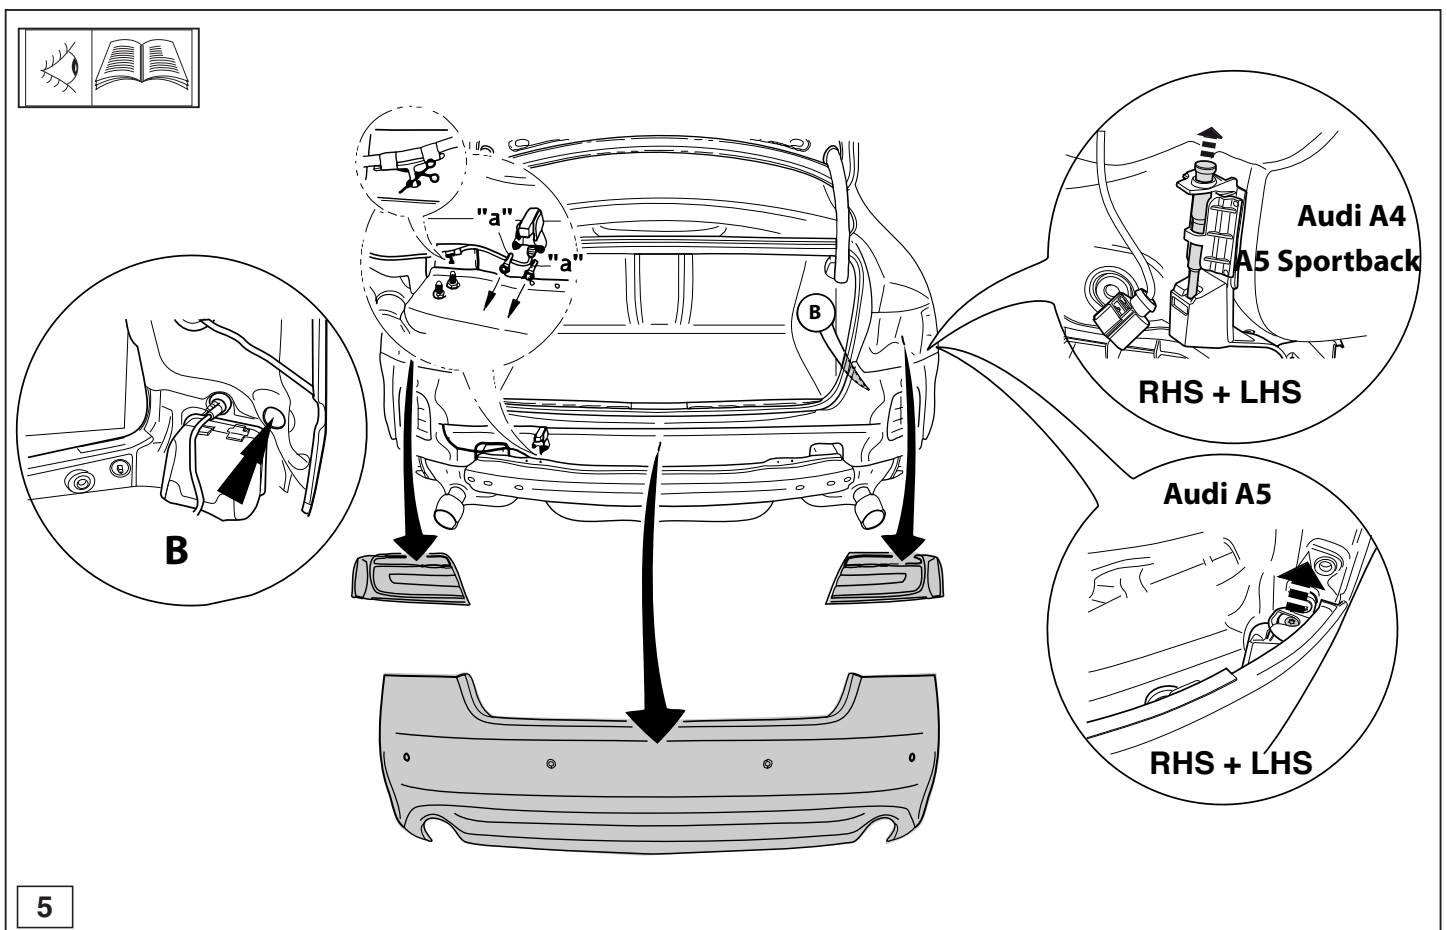


© 492670/09-06-2015/8

Template 4926

Only for A5


Place on outside bumper

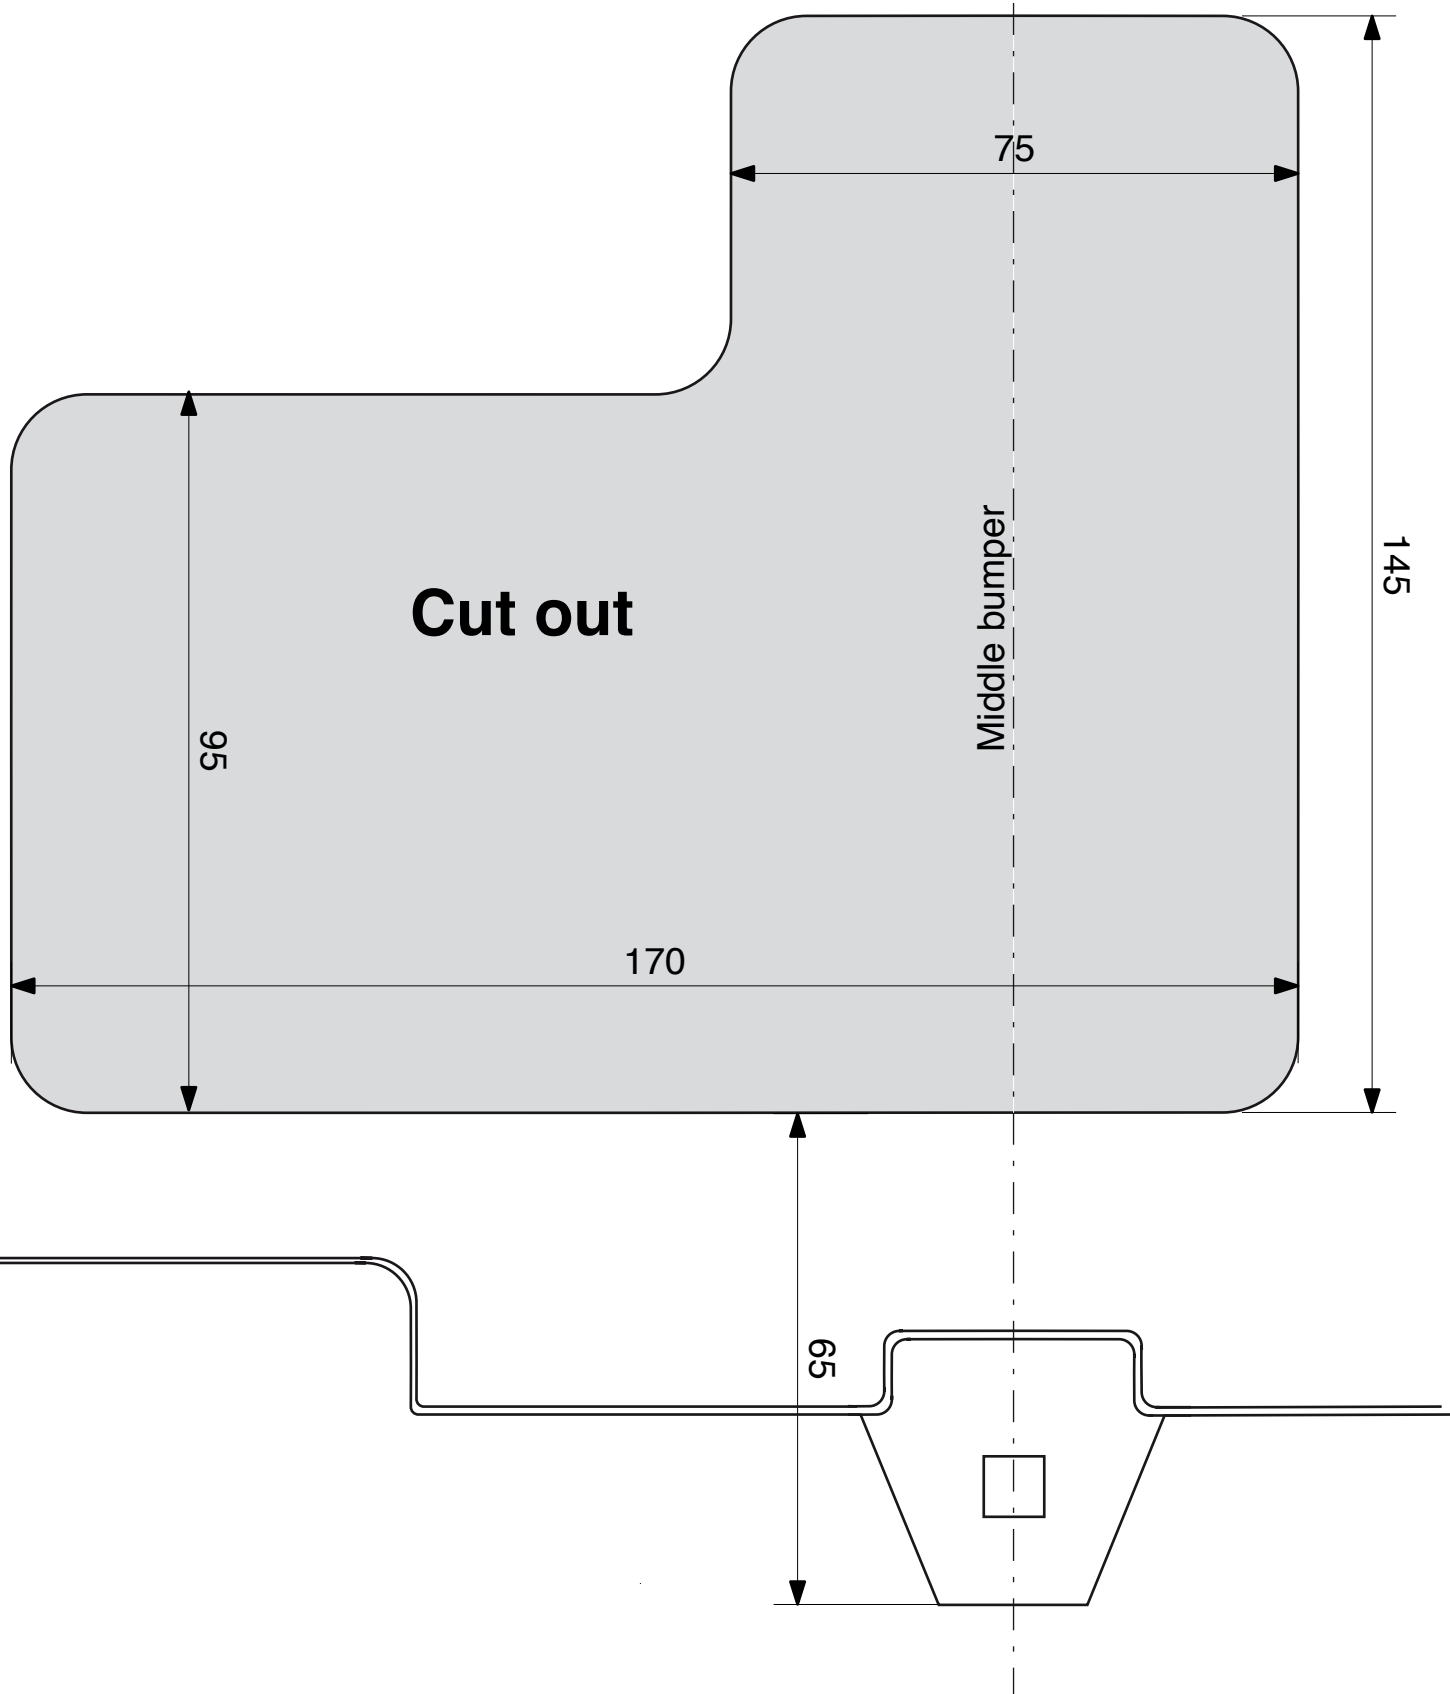

Template 4926

Audi A4

Place on inside bumper

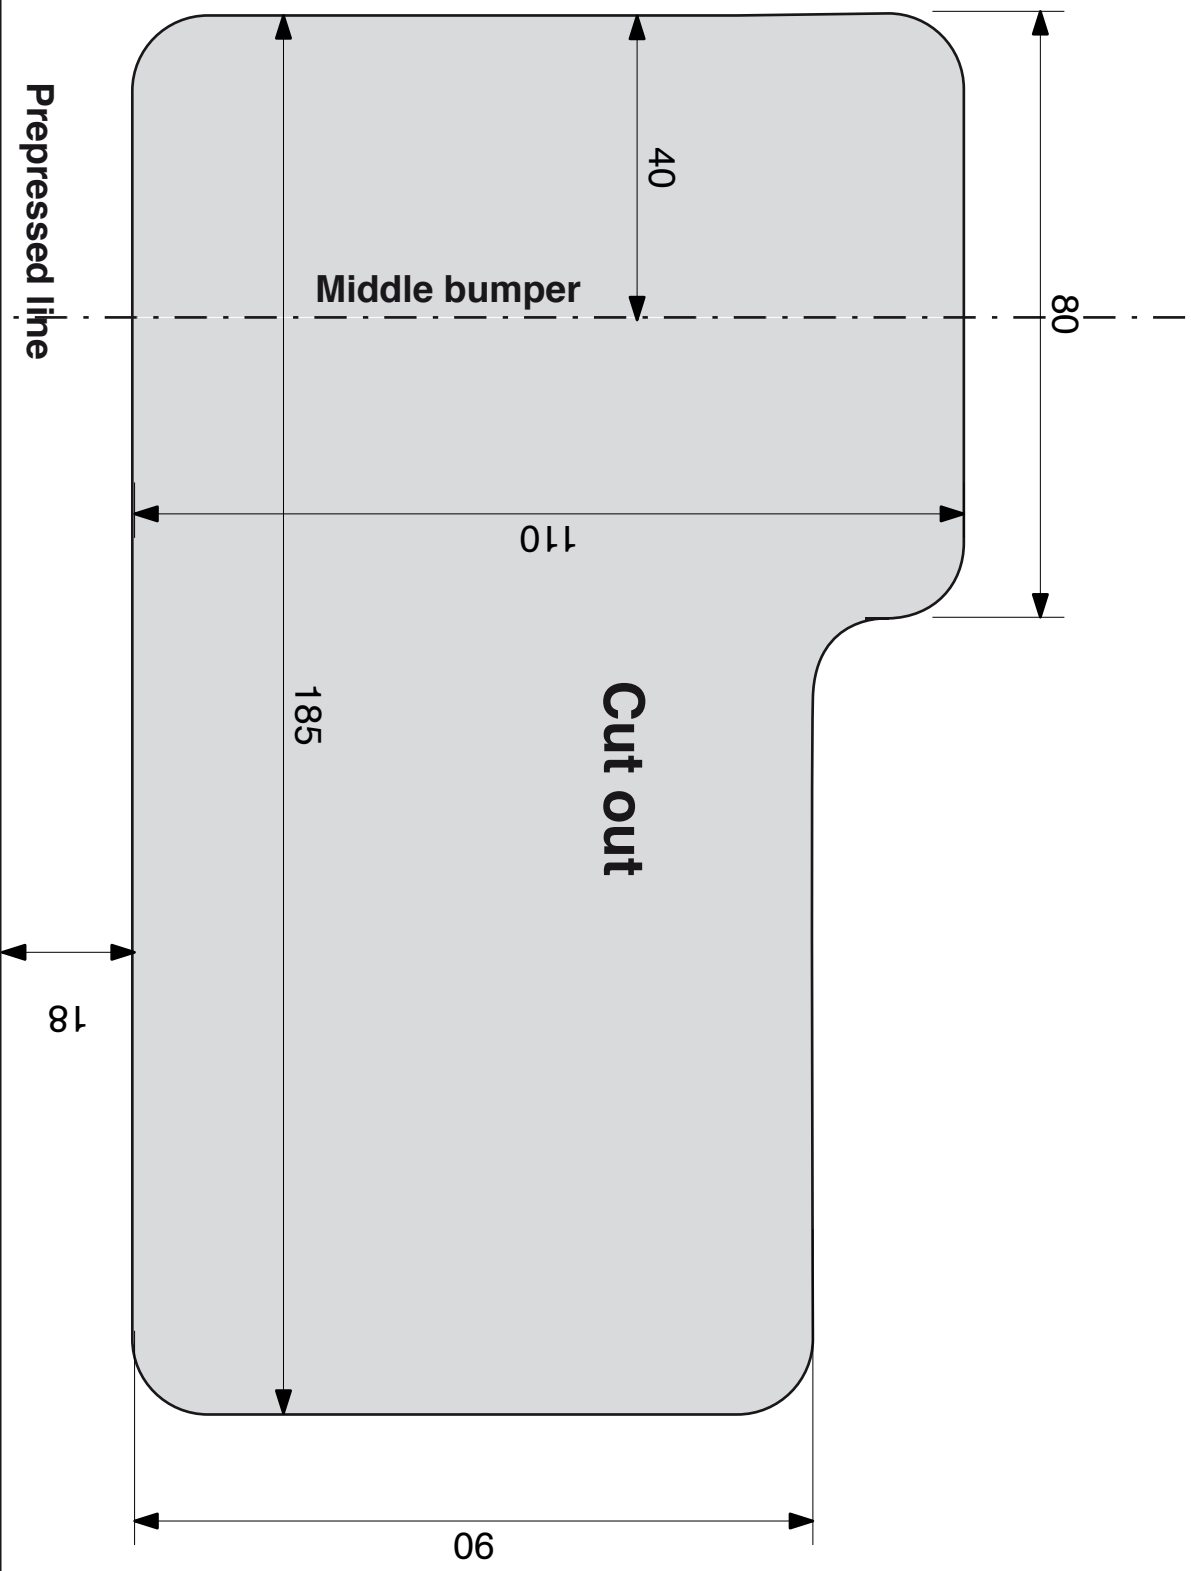

Template 4926

A5 Sportback 2009-> Only

Place outside bumper

